Necessary Accessories

Checking the Packing Contents

The following accessories should be packed with your new camera; please make sure all are enclosed after opening the packaging. In the unlikely event that something is missing, please contact the sales outlet.

 Lithium-ion battery (Model No. DR-LB4) Battery Charger (Model No. DR-BC-K4), 	× 1
Power Supply cord	× 1
3) USB cable	× 1
4) CD-ROM	× 1
5) Strap	× 1
6) Quick Guide	× 1
7) Warranty card	× 1
8) SD Memory Card	× 1

^{*} If you purchase this product in Japan, the packing contents will be different from what mentioned above.

Items Sold Separately

- AC adapter kit (Model No.: DR-AC4)
 Lithium-ion Battery (Model No.: DR-LB4)
- Soft Camera Case (Model No.: DR-CC4)