

Checking the Packing Contents

The following accessories should be packed with your new camera; please make sure all are enclosed after opening the packaging. In the unlikely event that something is missing, please contact the sales outlet.

1) Lithium-ion battery (Model No. DR-LB4)	× 1
2) Battery Charger (Model No. DR-BC-K4), Power Supply cord	× 1
3) USB cable	× 1
4) CD-ROM	× 1
5) Strap	× 1
6) Quick Guide	× 1
7) Warranty card	× 1
8) SD Memory Card	× 1

This product can be used with the following power supplies:

1) Lithium-ion battery (the packaged item or purchased separately)

- Read the user's guide on the battery and the charger thoroughly, and use them accordingly.
- You cannot charge the battery in the camera.
- When disposing of rechargeable batteries, please support recycling by participating in the recovering system of the store from which you bought the batteries.
- The number of pictures you can take varies with the conditions of use and the performance of the rechargeable batteries

* Please refer to page 20 for information on battery life.

2) Plugging in at home

- Connect the designated AC adapter (sold separately, model number: DR-AC4).

Items Sold Separately

- AC adapter kit (Model No.: DR-AC4)
- Lithium-ion Battery (Model No.: DR-LB4)
- Soft Camera Case (Model No.: DR-CC4)