

Package contents

Carefully unpack your package and make sure that you have the following items. If any item is missing or if you find any mismatch or damage, contact your dealer without delay.

- Digital camera
- USB cable
- Video cable
- Software CD-ROM
- Quick guide
- Camera strap
- Camera pouch
- 2 x AA alkaline batteries