

Checking the Packing Contents

The following accessories should be packed with your new camera; please make sure all are enclosed after opening the packaging. In the unlikely event that something is missing, please contact the sales outlet.

- 1) Lithium-ion battery (Model No. NP-600)
- 2) Battery Charger (Model No. BC-600), Power Supply cord
- 3) USB cable
- 4) CD-ROM
- 5) Strap
- 6) Quick Guide
- 7) Warranty card
- 8) SD Memory Card

This product can be used with the following power supplies:

1) Lithium-ion battery (the packaged item or purchased separately)

- Read the user's guide on the battery and the charger thoroughly, and use them accordingly.
- You cannot charge the battery in the camera.
- When disposing of rechargeable batteries, please support recycling by participating in the recovering system of the store from which you bought the batteries.
- The number of pictures you can take varies with the conditions of use and the performance of the rechargeable batteries

* Please refer to page 22 for information on battery life.

2) Plugging in at home

- Connect the designated AC adapter (sold separately, model number: AC-9).

Items Sold Separately

- AC adapter (Model No.: AC-9)
- Lithium-ion Battery (Model No.: NP-600)
- Soft Camera Case (Model No.: CS-DG700)