

Please check your Bios Version:

1. Turn on the camera
2. Press and hold the menu/set button
3. Press and hold the release button
4. Press 2x TELE 1x WIDE

A blue screen will appear. The first two entries show the Bios versions.

e.g.

BOOT VER. 1.04A

MAIN VER. 1.04A

If you have vers. 1.01 or 1.00 you should update the Bios.

Please turn the camera off.

!! THE BATTERY SHOULD BE FULLY CHARGED !!

!! YOU NEED A SD/MMC CARD READER !!

BIOS UPDATE:

Please copy the content of the file "boot_bios_v1.04a_kd-400z.zip" or "main_bios_v1.15a_kd-400z.zip"

to an empty storage media (SD/MMC).

!! YOU NEED A SD/MMC CARD READER !!

!! THE BATTERY SHOULD BE FULLY CHARGED !!

1. The camera is turned off.

If you just want to update the main_bios go to step 6.

2. Insert the card with the "boot_bios" in the camera.
3. Open the front cap to turn the camera on.
4. Press the DELETE (Trash) button.
5. When the message ==PLEASE POWER OFF== appears, close the front cap.
6. Insert the card with the main_bios" in the camera.
7. Open the front cap to turn the camera on.
8. Press the DELETE (Trash) button.
9. When the message ==PLEASE POWER OFF== appears, close the front cap.

The update is completed.