


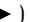




## Playback / Erasing


### Playing A Recorded Movie Clip





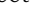
Please set the Mode Dial at Playback Mode (  ). Use Up (  ) and Down (  ) Direction Buttons to select a movie clip. Select a recorded movie clip. Press Right Direction Button (  ) to play the movie clip.

#### Note


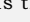
You can press Right Direction Button (  ) to pause the playing and press Right Direction Button (  ) again to cancel the pause.

### Going Into Thumbnail Images (Small Images)

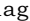
Please set the Mode Dial at Playback Mode (  ).


1. Press Left Direction Button (  ) to enter thumbnail image table.
2. Use Up (  ) and Down (  ) to select an image or movie clip.
3. Press Right Direction Button (  ) to enlarge the selected image or movie clip.
4. To go back to the thumbnail image table press Left Direction Button (  ) again.

#### Note

When a thumbnail image is selected, please check if it shows (  ) on the left top corner of the LCD screen. If (  ) is shown it means the selected thumbnail is a movie clip but not a still image.

### Deleting Image(s)

Please set the Mode Dial at Playback Mode (  ) and press Menu Button to enter "Play" menu table.

1. Select "Delete"
2. (a) Select "Delete Image" to confirm the willing to delete the selected image or movie clip.  
(b) Select "Delete All" to confirm the willing to delete all stored images or movie clips.
3. Select "No" to cancel the order or select "Yes" to delete.
4. Press Right Direction Button (  ) to confirm the setting.



## Installing Camera Driver

Under Microsoft Windows 98 / 98SE

1. Turn on the computer.
2. Insert the CD into the CD-ROM Drive.



- If the PC is set to auto run the program, simply click "Driver" to start the installation.
- If the PC is not set to auto run the program, please go to the Start Menu, click "Run" and key in "CD-ROM Drive:\Camera.exe" and then click "OK" Button.

 


## Installing Camera Driver

3. A welcome window appears and please click "Next" to go to next step.



4. The computer will start the installation.

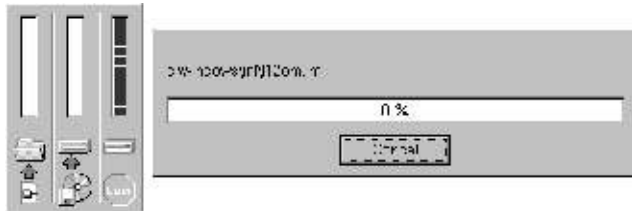

5. Click "Finish" to start the installation of DirectX8.1 .



## Installing Camera Driver

6. Click "Yes" to proceed the installation of DirectX8.1.



7. A license agreement appears and please read the content of the agreement. If you accept the terms of the license agreement, click "Yes" to go the next step. Or you can click "No" to cancel the installation of Ulead Explorer 7.0 SE Platinum.



8. The PC will start the installation of DirectX8.1. After the installation of DirectX 8.1 the installation of camera driver is complete.



## Installing Camera Driver

 
9. Please click "OK" to restart the PC.



## Installing Camera Driver

Under Microsoft Windows 2000

1. Turn on the computer.
2. Insert the CD into the CD-ROM Drive.

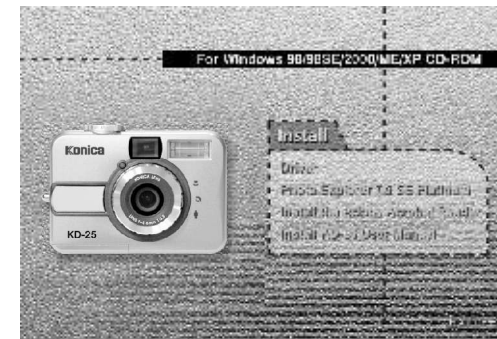

- If the PC is set to auto run the program, simply click "Driver" to start the installation.
- If the PC is not set to auto run the program, please go to the Start Menu, click "Run" and key in "CD-ROM Drive:\Camera.exe" and then click "OK" Button.





## Installing Camera Driver

3. Click "OK" to proceed the installation of DirectX8.1.



4. A license agreement appears and please read the content of the agreement. If you accept the terms of the license agreement, click "Yes" to go the next step. Or you can click "No" to cancel the installation of Ulead Explorer 7.0 SE Platinum



5. The PC will start the installation of DirectX8.1. After the installation of Direct X8.1 the installation of camera driver is complete.



## Installing Camera Driver

6. Please click "OK" to restart the PC.





## Installing Camera Driver

### Under Microsoft Windows ME / XP

Windows ME and Windows XP do not need to install this driver. Please skip the driver installation and go to page 33 for installation of Ulead Photo Explorer or go to page 52 to download the stored image(s) onto the PC.



## Installing Camera Driver

### Under Mac 9.X or later

This camera supports only Mac 9.X or versions later. If the operating system that you are using is later than Mac 9.X, you will not need to install this driver. Please skip the driver installation and go to page 40 for installation of Ulead Photo Explorer or go to page 54 to download the stored images onto the PC.