

## Driver installation instructions for the KD-300Z Digital Revio Camera

1. Attach the SD Card Reader (with or without the extension) to your computer's USB port. Installation of a driver is not necessary if you are running Windows ME™, Windows 2000™ or MAC OS (8.6/9.1/X). If you are running Windows™ 98, installation of the SD Card Reader driver is required as follows:
  - a. Attach the SD Card Reader to the USB port on your computer.
  - b. When "Add New hardware wizard" appears. Click "Next".
  - c. Select "Search for the best driver for your device." Click "Next".
  - d. Place a check mark next to "specify a location" and browse to the location of the downloaded drivers. Click "Next". At the following dialog box click "Next" to install the drivers.
  - e. After the eUSB MultiMedia Card Adapter drivers are installed, click "Finish".
2. The SD Card Reader will now be recognized in Windows as a "removable disk" in the My Computer window. On the MAC, a removable disk icon will appear on the desktop.